






Use your TOPRIZZZ to remove the first piece of the liner, as shown on the image.

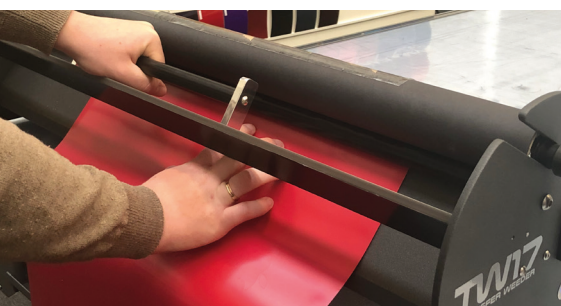

Open the clamp and place your transfer into your TW17. The liner should be facing downwards. Close the clamp so your transfer is hold firmly in place.

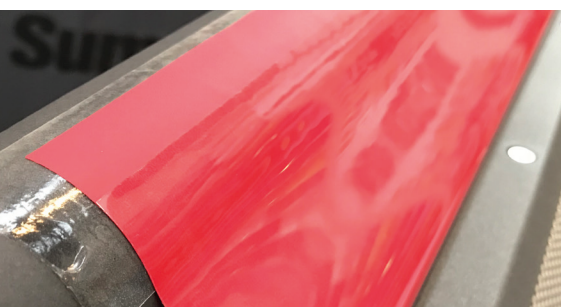

Pull the media to the core of your TW17, and stick the top of the transfer to the tape on the core.

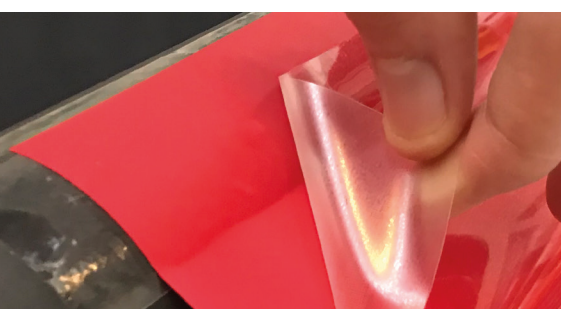

Now the transfer is stuck to the core, you can pull the liner away from the transfer down towards your working table.



Make sure everything is tight, as seen on the photo. You can now turn the handle, and watch while your TW17 weeds your job in no time.

B-FLEX

TYPE	RECOMENDED	OPTIMAL TEMPERATURE °C
Gimme5	Yes	55
Flock	No	-
BF Print Mat	Yes	28
BF Print Gloss	Yes	28

STAHL

TYPE	RECOMENDED	OPTIMAL TEMPERATURE °C
Sportsfilm ekstra	Yes	50
Sportsfilm Plus	Yes	50
3D silicon 200my	Yes	28
3D silicon 500my	Yes	28

SISER

TYPE	RECOMENDED	OPTIMAL TEMPERATURE °C
P.S Film	Yes	50
P.S Film+	Yes	50
Moda Glitter 2	Yes	45


THE MAGIC TOUCH


TYPE	RECOMENDED	OPTIMAL TEMPERATURE °C
123 Flex	Yes	45
123PremiumFlex	Yes	50

We've tested different materials with different temperatures and made the above recommendations. Please note that you might have to try other settings depending on your material and type of job to get the perfect result. We'll advice you to always make your own tests to find the perfect temperature for your job.



Press (2)  to start setting the temperature

Press (3)  or (4)  to adjust the temperature up/down.

Press (2)  again to shift between digits.

Press (1)  to set, and save the temperature setting